


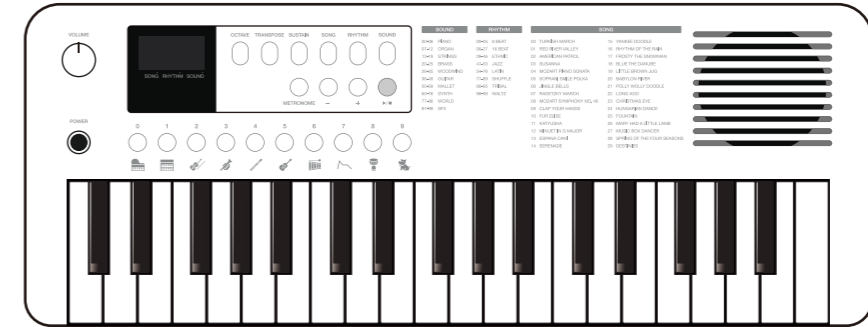

ELECTRONIC KEYBOARD EK371

User's manual



Sound List	
PIANO	
0	Acoustic Grand Piano
1	Bright Acoustic Piano
2	Honky-tonk Piano
3	Chorused Piano
4	Harpsichord
5	Clavichord
6	Metal Piano
ORGAN	
7	Hammond Organ
8	Percussive Organ
9	Church Organ
10	Reed Organ
11	Accordian
12	Harmonica
STRINGS	
13	Violin
14	Viola
15	Cello
16	Contrabass
17	Pizzicato Strings
18	Orchestral Harp
19	Electronic String Ensemble
BRASS	
20	Trumpet
21	Trombone
22	Tuba
23	Muted Trumpet
24	French Horn
25	Synth Brass 1
WOODWIND	
26	Sax
27	Oboe

28	English Horn
29	Bassoon
30	Clarinet
31	Piccolo
32	Flute
33	Bottle Blow
34	Ocarina
35	Bass Oboe
GUITAR	
36	Acoustic Guitar (nylon)
37	Acoustic Guitar (steel)
38	Electric Guitar (jazz)
39	Electric Guitar (clean)
40	Overdriven Guitar
41	Guitar Harmonics
42	Acoustic Bass
43	Electric Bass (finger)
44	Electric Bass (pick)
45	Fretless Bass
46	Slap Bass 1
47	Slap Bass 2
48	Synth Bass 1
49	Synth Bass 2
MALLET	
50	Celesta
51	Glockenspiel
52	Music box
53	Vibraphone
54	Marimba
55	Xylophone
56	Tubular Bells
57	Tinkle Bell
58	Agogo
59	Woodblock

SYNTH	
60	Choir Aahs
61	Voice Oohs
62	Lead 1
63	Lead 2
64	Pad 1
65	Pad 2
66	Lead 3
67	Psychedelic Synth Lead
68	Vibraphone Synth Lead
69	Marimba Synth Lead
70	Wind FX
71	Clarinet FX
72	Crystal FX
73	Environmental Lead
74	Orchestra Lead
75	Bass Lead
76	East Nation Pad
WORLD	
77	Dulcimer
78	Shakuhachi
79	Sitar
80	Banjo
81	Shamisen
82	Koto
83	Kalimba
84	Bagpipe
85	Shanai
86	Taiko Drum
SFX	
87	Dog
88	Cat
89	Cow
90	Horse

91	Bird Tweet
92	Orchestra Hit
93	Rain
94	Thunder
95	Seashore
96	Telephone Ring
97	Helicopter
98	Applause
99	Gunshot

Rhythm list	
8 BEAT	
0	8 Beat 1
1	8 Beat 2
2	8 Beat 3
3	8 Beat 4
4	Dance
5	Rock Dance
16 BEAT	
6	16 Beat 1
7	16 Beat 2
8	16 Beat 3
9	16 Beat 4
10	16 Beat 5
11	16 Beat 6
12	16 Beat 7
13	16 Accent 1
14	16 Accent 2
15	16 Ballad 1
16	16 Ballad 2
17	16 Funk
18	16 Ride
19	16 Rock 1
20	16 Rock 2
21	16 Rock 3
22	Funk
23	Heavy Ballad
24	Power Funk 1
25	R&B 1
26	R&B 2
27	R&B 3
ETHNIC	
28	Bolero
29	Brit Rhumba 1
30	Brit Rhumba 2
31	Calypso

32	Ethnic Rock
33	Jorpo
34	Lambada
35	Mambo 1
36	Mambo 2
37	March 1
38	March 2
39	Merengue 1
40	Oriental 1
41	Oriental 2
42	Polka
43	Power Polka
44	Rhumba 1
45	Rhumba 2
46	Tango
JAZZ	
47	Jazz Ride 1
48	Jazz Ride 2
49	Jazz Ride 3
50	Jazz Shuffle 1
51	Jazz Shuffle 2
52	Jazz Waltz 1
53	Jazz Waltz 2
LATIN	
54	8 Latin
55	16 Latin 1
56	16 Latin 2
57	16 Latin 3
58	16 Latin 4
59	16 Latin 5
60	Bossa 1
61	Bossa 2
62	Heavy Latin 1
63	Heavy Latin 2
64	Heavy Latin 3
65	Heavy Latin 4

66	Heavy Latin 5
67	Pop Samba 1
68	Power Latin 1
69	Power Samba 1
70	Power Samba 2
71	Power Samba 3
72	Rock Latin 1
73	Rock Latin 2
74	Salsa
75	Samba
76	Soft Bossa
SHUFFLE	
77	6/8 Beat
78	6/8 Rock
79	Shuffle 1
80	Shuffle 2
81	Shuffle 3
82	Shuffle 4
83	Chamber Pop
84	Ethnic Shuffle 1
85	Ethnic Shuffle 2
86	Ethnic Shuffle 3
87	Ethnic Shuffle 4
88	Ethnic Shuffle 5
89	Latin Shuffle
TRIBAL	
90	8 Tribal
91	16 Tribal 1
92	16 Tribal 2
93	16 Tribal 3
94	16 Tribal 4
95	16 Tribal 5
WALTZ	
96	Waltz Ride
97	Power Waltz 1
98	Power Waltz 2
99	Power Waltz 3

Song List	
0	Turkish March
1	Red River Valley
2	American Patrol
3	Susanna
4	Mozart Piano Sonata
5	Soprani Smile Polka
6	Jingle Bells
7	Radetzky March
8	Mozart Symphony No. 40
9	Clap Your Hands
10	Fur Elise
11	Katyusha
12	Minuet in G Major
13	Espana Cani
14	Serenade
15	Yankee Doodle
16	Rhythm of the Rain
17	Frosty the Snowman
18	Blue the Danube
19	Little Brown Jug
20	Babylon River
21	Polly Wolly Doodle
22	Long Ago
23	Christmas Eve
24	Hungarian Dance
25	Fountain
26	Mary Had a Little Lamb
27	Music Box Dancer
28	Spring of the Four Seasons
29	Destinies

GETTING STARTED

Thank you for your purchase. We hope that this product will bring you complete satisfaction. Please read this user 's manual carefully before using the product to make a correct use of the functions and know well about the system connection and usage. Please keep this manual in a safe place for future reference.

BOX CONTENT

Please make sure that the following items are in the packaging when you open it for the first time: EK371 piano – USB-C cable - User manual (EN-FR-NL-SP).

PRECAUTIONS

Location

Using the unit in the following locations can result in a malfunction.

- In direct sunlight
- Locations of extreme temperature or humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration
- Close to magnetic fields

Power Supply

This product can be powered by 4 AA batteries (not included) or via USB-C (cable provided, USB charger not included). The minimum power requirement is 5.0V 0.5A. Please make sure to use a USB power adapter with the correct voltage. Never use a USB power adapter with more than 5.0V voltage.

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.


Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Keeping foreign matter out of your equipment

Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock. Be careful not to let metal objects get into the equipment.

OPERATING INSTRUCTIONS

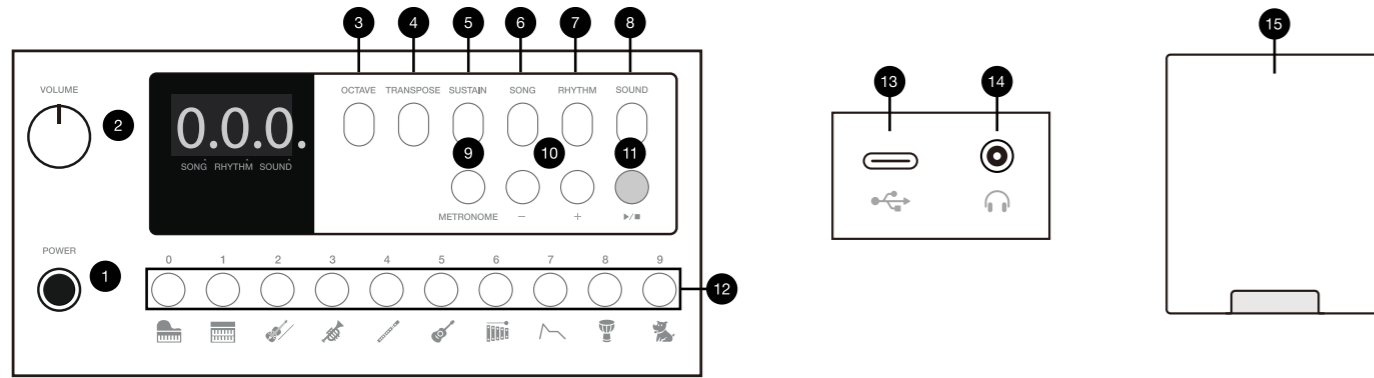

1. Operation

- 1 Press this button to turn Power on or off.

Note: In order to save energy, the instrument will automatically shut down after 30 minutes of not being used. You can turn off the power protection by using a keyboard command.

- 2 Turn this knob clockwise to increase or counter-clockwise to decrease the output volume.

- 3 Press this button and use the + or - (1 0) buttons to set the keyboard octave range.

Note: 3 seconds of not pressing either of the + and - buttons will set the + and - buttons back to the Sound, Rhythm or Song content selection mode.

- 4 Press this button and use the + or - (1 0) buttons to set the keyboard transpose amount.

Note: 3 seconds of not pressing either of the + and - buttons will set the + and - buttons back to the Sound, Rhythm or Song content selection mode.

- 5 Press this button to turn the sound Sustain on or off.

- 6 ~ 8 Press any of these buttons to enter the labelled mode.

- 9 Press this button to start or stop Metronome.

- 10 Press either of these buttons to select the next or previous Sound, Rhythm or Song content, depending on the current selected mode. Combined with other buttons, these buttons also changes various parameters.

- 11 Press this button to start or stop the current selected Rhythm or Song.

Note: Under the default Sound mode, Rhythm gets played back.

- 12 Under the default Sound mode, these buttons select the labelled instrument Sound. To press the same button repeatedly will select the next Sound slot in the labelled Sound category. Under Rhythm or Song mode, these buttons work as number input keys and let you access the desired Rhythm or Song content by entering the content number.

Note: When inputting a 1-digit number or 2-digit, type the number and wait for a few seconds till it's recognised by the keyboard.

2. Back & Bottom Panels

- 13 USB Power Input: For connecting an USB-C cable to power the keyboard. Also works as MIDI output.

- 14 Phones Output: For connecting headphones or earphones.

- 15 Battery Compartment: For installing 4 x AA batteries to power the keyboard.

3. Mode

There are 3 modes on this keyboard that you can enjoy: Sound, Rhythm and Song

SOUND mode

This is the default mode on booting up. The display shows the current selected Sound number, and + & - buttons change the Sound to the next or previous ones.


RHYTHM mode

The display shows the current selected Rhythm number, and + & - buttons change the Rhythm contents. Press Sound to go back to selecting Sound.

SONG mode

The display shows the current selected Song number, and + & - buttons change the Song selection. Press Sound to go back to selecting Sound.

4. Function

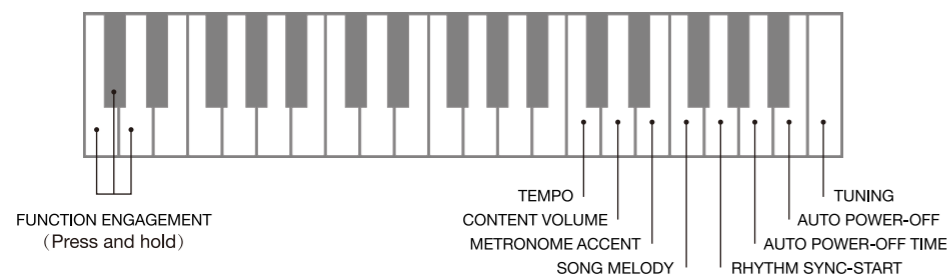

Press and hold C1, C#1 and D1 keys at the same time to engage Function parameter access. Release the keys to disengage Function.

No.	PARAMETER	RANGE	DESCRIPTION
1	TEMPO	30 - 280 (BPM)	Press this key and then use + & - buttons to adjust tempo for Metronome, Rhythm and Song.
2	CONTENT VOLUME	0 - 15	Press this key and then use + & - buttons to adjust volume for Metronome, Rhythm and Song.
3	METRONOME ACCENT	0 - 16	Press this key and then use + & - buttons to change the accent for Metronome.
4	SONG MELODY	On, off	Press this key to turn the Song main melody track on and off alternately for practicing.
5	RHYTHM SYNC-START	On, off	Press this key to turn Sync-start on and off alternately. *
6	AUTO POWER-OFF TIME	5, 10, 15, 30, 60, 120 (mins)	Press this key to set the duration for which there is no input until the power turns off automatically.
7	AUTO POWER-OFF	On, off	Press this key to engage and disengage the auto-power off alternately.
8	TUNING	-50 ~ +50	Press this key and then use + & - buttons to change the keyboard tuning by a 2-cent step.

* **Note:** When Sync-start is engaged, Rhythm automatically starts playing once you hit any key so your keyboard playing and Rhythm can start together at the same time.

SPECIFICATIONS

Electronic keyboard with 37 keys and LED display

Polyphonies 32 voices

100 sounds

100 rhythms

30 songs

Other features: metronome, sustain, melody on/off, start rhythm sync, octave, transpose and tuning adjustments.

Power supply via 5V USB-C cable (cable provided, USB charger not included)

Operation possible with 4 optional AA batteries (not included)

3.5mm mini jack headphone output

MIDI output via USB-C

Integrated 8cm speaker with 2W amplifier

Dimensions: 490 x 186 x 60mm

Weight: 950 g

DISPOSAL OF ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. For more information please contact your local council or waste disposal service.

ABOUT THIS MANUAL

We strive to ensure that the information contained in this manual are as accurate as possible. Changes may be made to the manual or the product without prior notice. The latest updates will be available on our website www.onearz.com.

Our company shall under no circumstances be held liable for injury or damage caused by errors or omissions in this manual.

©Onearz 2024. All rights reserved. All brands and trademarks mentioned in this manual are the property of their respective owners.

EU DECLARATION OF CONFORMITY

We, A6 Europe s.a., established 127-129 rue Colonel Bourg, 1140 Brussels, Belgium

Declare under our own responsibility that the following equipment :

Brand : Onearz

Item code : OE_EK371

Product description : Electronic keyboard

Complies to the essential provisions of the following EC Directive(s):

EMC Directive: 2014/30/EU

RoHS Directive: 2011/65/EU, amendment 2015/863/EU

Date : June 2024

David Peroo, Product Manager